Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation

FLEX-RRH

Flow Transmitter / Switch FLEX-RRH



- Uncomplicated measurement of flow rates
- Metal housing with Hall sensor
- Working pressure up to 100 bar
- Long working life thanks to high quality ceramic axis and special plastic bearing
- Run-in and run-out sections are not necessary.
- Modular construction with various connection systems
- Plug-in and rotatable connections
- Analog and switching output
- Designed for industrial use
- Small, compact construction
- Simple installation
- Simple to use
- Cable outlet infinitely rotatable
- Optionally, non-return valve, filter, constant flow rate device in the connections

Characteristics

The flow meter consists of a spinner which is rotated by the flowing medium. The rotor's rotational speed is proportional to the flow volume per unit time. The rotor is fitted with magnets. A Hall sensor records the rotational speed, which is proportional to the flow rate.

The FLEX transducer on the sensor has an analog output (4...20 mA or 0...10 V) and one switching output, which can be configured as a limit switch for monitoring minimal or maximal, or as a frequency output.

The switching output is designed as a push-pull driver, and can therefore be used both as a PNP or an NPN output. The state of the switching output is signalled with a yellow LED in the switching outlet; the LED has all-round visibility.

The sensor is configured in the factory, or alternatively this can be done with the aid of the optionally available ECI-3 device configurator (USB interface for PC). A selectable parameter can be modified on the device, with the aid of the magnet clip provided. In this case, the current measured value is saved as the parameter value. Examples of these parameters are the switching value or the metering range end value.

The stainless steel electronics housing is rotatable, so it is possible to orient the cable outlet after installation.

Technical data

Sensor	hall element			
Nominal width	DN 10 (FLEX-RRH-010)			
	DN 25 (FLEX-RRH-025)			
Mechanical	female thread G ³ / ₈ , G 1			
Connection	male thread G 3/8 A, G	1 A		
	hose nozzle Ø11, Ø30			
	(other threaded, crimped, and plug-in			
	connections, connections with constant flow rate device or limiters available on request)			
Metering renges	0.1100 l/min	avaliable of fequest)		
Metering ranges	for details, see table "F	Ranges"		
Measurement	±3 % of the measured			
accuracy	20 70 01 1110 1110 1110 1110 1110 1110 1			
Repeatability	±1 % of full scale value			
Pressure loss	max. 0.5 bar			
Compressive	PN 100 (RRH-025M:	PN 40)		
strength	,			
Medium	0+70 °C			
temperature	00 000			
Storage	-20+80 °C			
temperature Materials	Harraina	OMO44NI minimum		
(wetted)	Housing CW614N nickelled or 1.4305			
	Rotor	PVDF with magnets,		
	glued with epoxy			
	resin			
	Bearing Iglidur X			
	Axis ceramic Zr0 ₂ -TZP			
	Seal	FKM		
Materials	Clamps	1.4301		
(non-wetted)	Electronic adapter	CW614N nickelled		
	Electronics housing	stainless steel		
	40.001455	1.4305		
Supply voltage	1830 V DC			
Power	< 1 W			
consumption Analog output	420 mA / max. load 5	500 O or		
Analog output	010 V / min. load 1 k			
Switching output	transistor output "push-pull"			
3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	(resistant to short circuits and reversed po-			
	larity)			
	I _{out} = 100 mA max.			
Display	yellow warning LED in plug outlet			
Electrical connection	for round plug connector M12x1, 4-pole			
Ingress protection	IP 67			
Weight	FLEX-RRH-010	approx. 0.8 kg		
	FLEX-RRH-025	approx. 2.1 kg		
Conformity	CE	11 3		
2001				

dsh_fam_flex-rrh_en_vs02

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



FLEX-RRH


Produktinformation


Signal output curves

Value x = Begin of the specified range= not specified range


Current output

Voltage output

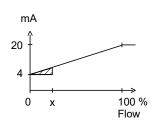

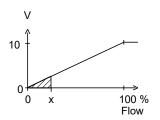

Frequency output

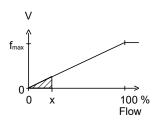


f_{max} selectable in the range of up to 2000 Hz

Other characters on request.

Ranges

Metering range	Types	Q _{max}
I/min (H₂O)		I/min (H₂O)
0.1 1.5	FLEX-RRH-010020	1.8
0.2 10.0	FLEX-RRH-010050	12.0
0.4 12.0	FLEX-RRH-010070	14.4
2.0 30.0	FLEX-RRH-025080	36.0
3.0 60.0	FLEX-RRH-025120	72.0
4.0 100.0	FLEX-RRH-025160	120.0

Wiring

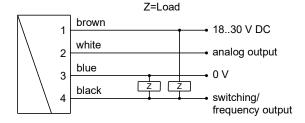


Connection example: PNP NPN



Before the electrical installation, it must be ensured that the supply voltage corresponds to the data sheet.

The use of shielded cabling is recommended.

Dimensions

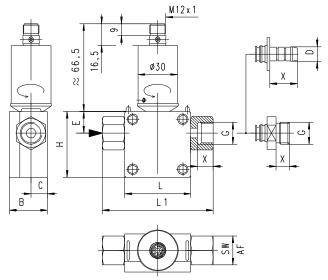

Threaded connection

G	DN	Types	H/L	L1	В	С	E	Х	SW
G 3/8	10	RRH-010G	50	84	29	12.5	16.5	12	22
G 3/8 A		RRH-010A						14	
G 1	25	RRH-025G	70	110	53	23.0	27.5	18	38
G1A		RRH-025A		122					

NPT threads on request

Hose nozzle connection

D	DN	Types	H/L	L1	В	С	E	Х
Ø11	10	RRH-010T	50	96	29	12.5	16.5	21
Ø30	25	RRH-025T	70	176	53	23.0	27.5	45

Custom specific connectors on request

Handling and use

Installation

The flow meter is installed in the pipework with the aid of the rotatable adapter pieces. If necessary, the adapters can be removed from the body of the housing after the stainless steel clips have been removed from the housing. Before reinstalling, it should be ensured that both the adapter with the O-ring and the sealing surface in the body are clean and undamaged. The adapters should be fitted carefully in the housing (it is best to turn them), so that the O-ring is not damaged.

With this flow sensor, there is no need for run-in and run-out sections. However, it should be ensured that the flow sensor is at all times filled with medium. Any preferred installation position is possible, but the best possible venting position should be chosen (rotor axis horizontal, flow horizontal or from bottom to top).

Air bubbles affect the measurement results. For filling processes, the valve should be installed behind the sensor. A running up time of approx. 0.5 seconds and a running down time of approx. 3 seconds should be noted.

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation

FLEX-RRH

Programming

The electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and 2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).



After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.


In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50 % can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".


Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.

The limit switch can be used to monitor minimal or maximal.


With a minimum switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is again exceeded.

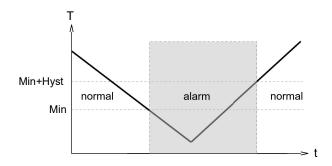

With a maximum switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

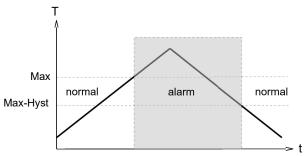


A switchover delay time (t_{DS}) can be applied to the switchover to the alarm state. Equally, one switch-back delay time (t_{DR}) of several can be applied to switching back to the normal state.

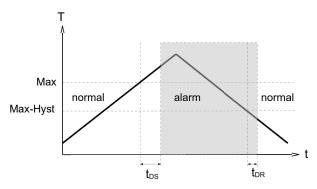

In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply voltage.

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.

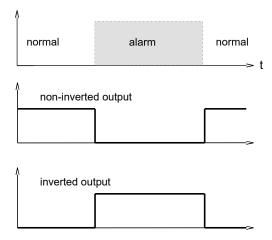

A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

dsh_fam_flex-rrh_en_vs02

Ordering code

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



FLEX-RRH

Produktinformation

The basic device is ordered e.g. RRH-010... with electronics e.g. FLEX-RRH-010... 2. 3. | V | E | FLEX-RRH-

O=Option

1.	Nominal width			
	010	DN 10		
	025	DN 25		
2.	Mechani	Mechanical connection		
	G	female thread		
	Α	male thread		
	Т	hose nozzle		
3.	Connecti	ion material		
	M	CW614N nickelled		
	K	1.4305		
4.	Housing	material		
	М	CW614N		
	K	1.4305		
5.	Inwards	flow drilling		
	020	Ø 2.0		•
	050	Ø 5.0		•
	070	Ø 7.0		•
	080	Ø 8.0	•	
	120	Ø12.0	•	
	160	Ø16.0	•	
6.	Seal mat	erial		
	V	FKM		
	E O	EPDM		
	N O	NBR		
	K O	Kemraz		
7.	Rotor			
	05	with 5 magnets		
		with 2 magnets		
8.	Rotor ma			
	V	PVDF		
9.	Connect			
	E	electronics		
10.	For nomi	nal width	l	
	010	DN 10		•
	025	DN 25	•	Г
11.				
	ı	current output 420 mA		
	U	voltage output 010 V		
	K	no analog output		
12.	Switching	g output		
	Т	push-pull		
		NPN (open collector)		
	K	no switching output		

13.	Switching function		
	L	minimum-switch	
	Н	maximum-switch	
	R	frequency output	
	K	no switching output	
14.	Switching signal		
	0	standard	
	(C	inverted	

Options for FLEX

Special range for analog output: <= metering range (standard = metering range)	[]l/min
Special range for frequency output: <= metering range (standard = metering range)	[l/min
End frequency (max. 2000 Hz)	Hz
Switching delay (from Normal to Alarm)	. s
Switchback delay (from Alarm to Normal)	s s
Power-On delay period (099 s) (time after power on, during which the outputs are not actuated)	s
Switching output fixed	l/min
Special hysteresis (standard = 2 % of end value)	<u></u> %

Options

- Transparent cover DN 10
- Air or gas model

Accessories

- Cable/round plug connector (KPU04)
- Device configurator ECI-3
- Mechanical connection pieces with non-return valve, filter, constant flow device or customer-specific requirements available on request