Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

senseca

Product Information

OMNI-HR2E-032..050

Flow transmitter / switch OMNI-HR2E



- · Optimized for use with water
- Analog output 4..20 mA or 0..10 V
- Two programmable switches
- Graphical LCD display, backlit, can be read in sunlight and in the dark
- Selectable units in the display
- Programmable parameters via rotatable, removable ring (programming protection)
- Electronics housing with non-scratch, chemically resistant glass
- Rotatable electronic housing for best reading position
- Designed for industrial use

Characteristics

Mechanical flow switch, for fluid media, with spring-supported piston and magnetic triggering of Hall sensors. Robust construction in brass or stainless steel.

The OMNI transducer located on the sensor has a backlit graphics LCD display which is very easy to read, both in the dark and in bright sunlight. The graphics display allows the presentation of measured values and parameters in a clearly understandable form. The measured values are displayed to 4 places, together with their physical unit, which may also be modified by the user. The electronics have an analog output (4..20 mA or 0..10 V) and two switching used as limit outputs which can be switches for monitoring minimal or maximal, or as two-point controllers. The switching outputs are designed as push-pull drivers, and can therefore be used both as PNP and NPN outputs. Exceeding limit values is signaled by a red LED which is visible over a long distance, and by a clear text in the display.

The stainless steel housing has a hardened non-scratch mineral glass pane. It is operated by a programming ring fitted with a magnet, so there is no need to open the operating controls housing, and its leakproofness is permanently ensured.

By turning the ring to left or right, it is simple to modify the parameters (e.g. switching point, hysteresis...). To protect from unintended programming, it can be removed, turned through 180 $^{\circ}$ and replaced, or completely removed, thus acting as a key.



Sensor
Nominal width DN 32 / 40 / 50 Process connection female thread G 1½G 2 (further process connections available on request) Metering range 5300 l/min for details see table "Ranges" Pressure loss ~ 1 bar at Q _{max} for details see table "Ranges" Q _{max} up to 300 l/min for details see table "Ranges" Measurement accuracy ±8 % of full scale value Pressure resistance PS 200 bar Medium temperature -20+85 °C, optionally -20+100 °C Media water Wiring see section "Wiring" Materials medium-contact Brass construction: CW614N nickelled, CW614N, inckelled, CW614N, incke
Process connection
Connection (further process connections available on request)
Pressure loss
Pressure loss Qmax up to 300 l/min table "Ranges"
Measurement accuracy
Pressure resistance
resistance Medium temperature -20+85 °C, optionally -20+100 °C Ambient temperature -20+70 °C Media water Wiring see section "Wiring" Materials medium-contact Brass construction: CW614N nickelled, CW614N, 1.4305, 1.4310, hard ferrite, Stainless steel construction: 1.4571, 1.4310, hard ferrite Materials, non-medium-contact Electronic adapter Electronics housing Glass CW614N nickelled Stainless steel 1.4305 Mineral glass, hardened Magnet Ring Samarium-Cobalt POM Supply voltage 1830 V DC Power consumption <1 W Analog output 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) Iout = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
temperature Ambient temperature -20+70 °C Media water Wiring see section "Wiring" Materials medium-contact Brass construction: CW614N nickelled, CW614N, 1.4305, 1.4310, hard ferrite, Stainless steel construction: 1.4571, 1.4310, hard ferrite Materials, non-medium-contact Electronic adapter Electronics housing Glass CW614N nickelled Stainless steel 1.4305 Mineral glass, hardened Magnet Ring POM Samarium-Cobalt POM Supply voltage 1830 V DC Power consumption 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) Iout = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
Materials medium-contact Brass construction: CW614N nickelled, CW614N, 1.4305, 1.4310, hard ferrite, Stainless steel construction: 1.4571, 1.4310, hard ferrite Materials, non-medium-contact Electronic adapter Electronics housing Glass CW614N nickelled Stainless steel 1.4305 Mineral glass, hardened Samarium-Cobalt POM Supply voltage 1830 V DC Power consumption <1 W Analog output 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) lout = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
CW614N, 1.4305, 1.4310, hard ferrite
1.4305, 1.4310, hard ferrite
$\begin{tabular}{lllllllllllllllllllllllllllllllllll$
Glass Mineral glass, hardened Magnet Samarium-Cobalt Ring POM Supply voltage 1830 V DC Power consumption Analog output 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output (resistant to short circuits and polarity reversal) Iout = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
hardened Magnet Samarium-Cobalt Ring POM Supply voltage 1830 V DC Power <1 W consumption Analog output 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) Iout = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
Ring POM
Supply voltage 1830 V DC
Power consumption 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ
consumption Analog output 420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) I _{out} = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
010 V / min. load 1 kΩ Switching output Transistor output "Push-Pull" (resistant to short circuits and polarity reversal) I _{out} = 100 mA max. Hysteresis adjustable, position of the hysteresis depends on minimum or maximum Display extendable graphic LCD display
(resistant to short circuits and polarity reversal) Iout = 100 mA max.
depends on minimum or maximum Display extendable graphic LCD display
Tomporature range 20 ±70 °C
32 x 16 pixels, background illumination,
displays value and unit, flashing LED signal lamp with simultaneous message on the display
Electrical for round plug connector M12x1, 5-pole connection
Ingress IP 67 (IP 68 when oil-filled)
Weight see table "Dimensions and weights"
Conformity CE
Installation Standard: horizontal inwards flow; other
installation positions are possible; the installation position affects the display, metering and switching range.



OMNI-HR2E-032..050

Product Information

Ranges


Details in the table correspond to metering ranges with horizontal inwards flow and increasing flow rate.

Standard type OMNI-HR2E

Metering range I/min H₂O	Q _{max.} recommended
5 - 60	300 l/min
10 -100	300 l/min
15 -200	300 l/min
25 -300	300 l/min

Special ranges are available.

Wiring

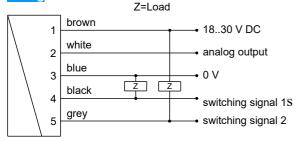

Connection example: PNP NPN



Before the electrical installation, it must be ensured that the supply voltage corresponds to the data sheet.

It is recommended to use shielded wiring.


The Push-Pull output) can as desired be switched as a PNP or an NPN output.

Dimensions and weights

..including OMNI electronics

DN	G	Types	L	ØD	sw	Ød	X	Weight kg
32	G 1 ¹ / ₄	HR2E-032GM	130	65	60	51	23	2.8
40	G 1 ¹ / ₂	HR2E-040GM	170	65	60	56	24	3.3
50	G 2	HR2E-050GM	185	80	75	70	26	5.5

High temperature

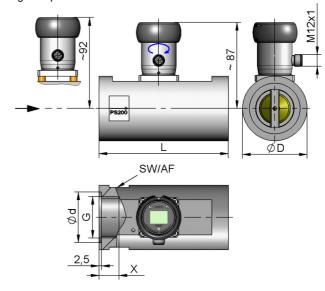

Gooseneck option



A gooseneck (optional) between the electronics head and the primary sensor provides freedom in the orientation of the sensor. This option simultaneously provides thermal decoupling between the two units

Handling and operation

Note

- Include straight calming section of 5 x DN in inlet and outlet
- If the media are dirty, install a filter (use magnetic filter for ferritic components)

The electronics housing is permanently connected to the primary sensor. There is no electrical connection between the electronics and the piston device. After installation, the electronic head can be turned to align the cable outlet.

It should be ensured that the piston device and the OMNI electronics are appropriately matched to each other.

Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

senseca

Product Information

OMNI-HR2E-032..050

Programming

The annular gap of the programming ring can be turned to positions 1 and 2. The following actions are possible:



Set to 1 = continue (STEP) Set to 2 = modify (PROG)

Neutral position between 1 and 2

The ring can be removed to act as a key, or turned through 180 $^{\circ}$ and replaced to create a programming protector.

Operation is by dialog with the display messages, which makes its use very simple.

Starting from the normal display (present value and unit), if 1 (STEP) is repeatedly selected, then the display shows the following information in this order:

Display of the parameters, using position 1

- Switching value S1 (switching point 1 in the selected unit)
- Switching characteristic of S1
 MIN = Monitoring of minimum value
 MAX = Monitoring of maximum value
- Hysteresis 1 (hysteresis value of S1 in the set unit)
- Switching value S2
- Switching characteristic of S2
- Hysteresis 2
- Code

After entering the code 111, further parameters can be defined:

- Filter (settling time of the display and output)
- Physical unit (Units)
- Output: 0..20 mA or 4..20 mA
- 0/4 mA (measured value corresponding to 0/4 mA)
- 20 mA (measured value corresponding to 20 mA)

For models with a voltage output, replace 20 mA accordingly with 10 V.


Edit, using position 2

If the currently visible parameter is to be modified:


- Turn the annular gap to position 2, so that a flashing cursor appears which displays the position which can be modified.
- By repeatedly turning to position 2, values are increased; by turning to position 1, the cursor moves to the next digit.
- Leave the parameter by turning to position 1 (until the cursor leaves the row); this accepts the modification.
- If there is no action within 30 seconds, the device returns to the normal display range without accepting the modification.

The limit switches S1 and S2 can be used to monitor minimal or maximal

With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is once more exceeded.

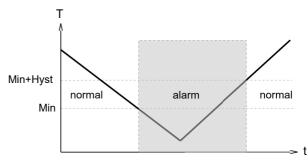

With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

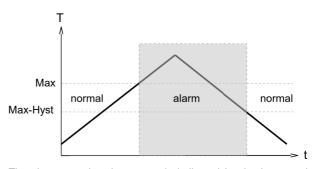

The change to the alarm state is indicated by the integrated red LED and a clear text in the display.

While in the normal state, the switching outputs are at the level of the supply voltage; in the alarm state they are at 0 V, so that a wire break would also display as an alarm state at the signal receiver.

Overload display

Overload of a switching output is detected and indicated on the display ("Check S1 / S2"), and the switching output is switched off.

Simulation mode

To simplify commissioning, the sensor provides a simulation mode for the analog output. It is possible to create a programmable value in the range 0..26.0 mA at the output (without modifying the process variable). This allows the wiring run between the sensor and the downstream electronics to be tested during commissioning. This mode is accessed by means of code **311**.

Factory settings

After modifying the configuration parameters, it is possible to reset them to the factory settings at any time using **Code** 989.

Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

OMNI-HR2E-032..050

Ordering code

The basic device is ordered e.g. HR2E-032GM100 with electronics e.g. OMNI-HR2E-ISO $\,$

O=Option

1.	Nominal v	vidth
	032	DN 32 - G 1 ¹ / ₄
	040	DN 40 - G 1 ¹ / ₂
	050	DN 50 - G 2
2.	Process c	onnection
	G	female thread
3.	Connection	on material
	М	brass
	K	stainless steel
4.	HR2E - Me	etering range H₂O for horizontal inwards flow
	060	5 - 60 l/min
	100	10 -100 l/min
	200	15 -200 l/min
	300	25 -300 l/min

5.	Analog output			
	I	current output 0/420 mA		
	U C	voltage output 0/210 V		
6.	Electrical	connection		
	S	for round plug connector M12x1, 5-pole		
7.	Optional			
	D	high temperature up to 120°C		
	Н	model with gooseneck		
	0 0	tropical model - oil-filled version for heavy duty or external use		

Options

Special quantities

Ordering information

• Specify direction of flow, medium, and metering range.

Accessories

- Cable/round plug connector (KB...) see additional information "Accessories"
- Device configurator ECI-1