
Senseca Germany GmbH Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

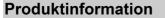

Flow Transmitter / Switch Screw Volumeter OMNI-VHS



- Measures and monitors viscous media (oil) 1.4..2500 l/min
- Connection G 1..G 2¹/₂
- Very low dependence on viscosity
- Can be used up to 40,000 mm²/s (cSt)
- Light and compact device (aluminium housing)
- Operation and measurement possible with forwards and
- reverse flow
- For cost-sensitive applications
- Analog output 4..20 mA or 0..10 V
- Two programmable switches
- Graphical LCD display, backlit,
- can be read in sunlight and in the dark
- Selectable units in the display
 Programmable parameters via rotatable, removable ring (programming protection)
- Electronics housing with non-scratch, chemically resistant glass
- Rotatable electronic housing for best reading position
- Designed for industrial use
- Small, compact construction
- Simple installation

Characteristics

The VHS flow transmitter measures the flow using the volumetric principle, and is suitable for fluid, viscous, lubricant media (e.g. lubricating oil). If the material for the VHS is selected appropriately, aqueous fluids such as soaps, pastes, and emulsions with non-abrasive characteristics can also be measured, as long as they

have sufficient lubricity. Because of the volumetric functioning principle, the device is almost completely independent of viscosity.

The VHS system consists of two interlacing screws which run in opposite directions, driven by the flowing medium. A magnetically pre-tensioned Hall sensor positioned outside the flow space detects the screw flanks, and creates a frequency signal proportional to the flow. Here, every pulse corresponds to a specific measured volume. There are no magnets in the flow space.

The OMNI transducer located on the sensor has a backlit graphics LCD display which is very easy to read, both in the dark and in bright sunlight. The graphics display allows the presentation of measured values and parameters in a clearly understandable form. The measured values are displayed to 4 places, together with their physical unit, which may also be modified by the user. The

Senseca

OMNI-VHS

electronics have an analog output (4..20 mA or 0..10 V) and two switching outputs, which can be used as limit switches for monitoring minimal or maximal, or as two-point controllers.

The switching outputs are designed as push-pull drivers, and can therefore be used both as PNP and NPN outputs. Exceeding limit values is signalled by a red LED which is visible over a long distance, and by a cleartext in the display. The stainless steel case has a hardened non-scratch mineral glass pane.

It is operated by a programming ring fitted with a magnet, so there is no need to open the operating controls housing, and its leakproofness is permanently ensured.

By turning the ring to right or left, it is simple to modify the parameters (e.g. switching point, hysteresis...). To protect from unintended programming, it can be removed, turned through 180 $^\circ$ and replaced, or completely removed, thus acting as a key.



OPTION C:

Preset Counter with external reset option, complementary switching outputs and actual value display.

OPTION C1:

Instantaneous value display with analogue output, pulse-volume output and totalizer

Technical data

	1						
Sensor	screw volumeter						
Nominal width	DN 2565						
Process	female thread G 1G $2^{1}/_{2}$						
connection							
Metering ranges	see table "Ranges and w	eights"					
Measurement	±1 % of the measured va	lue (at 20 mr	n²/s,				
accuracy	(cSt) of 1 %100 % nominal working range						
	(see also diagram in	(see also diagram in					
Repeatability	±0,25 %						
Pressure	Connection	SAE	PN				
resistance	material	flange	bar				
	Aluminium	without	160				
	Aluminium	with	350				
	Steel	without	350				
	Steel	with	350				
	others available on reque	st					
Pressure loss	see diagram in upstream	pages					
Medium	oil or non-aggressive						
	self-lubricating fluids						
Medium	-25+80 °C (150 °C avail	able on requ	est)				
temperature							

Senseca Germany GmbH Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386

Produktinformation




OMNI-VHS

Materials medium-contact	(special materials available on request):
1. Body	Aluminium 6082 anodised
2. Connections:	Aluminium 6082 anodised or steel
3. Main screw	Stahl 35SMnPb10 UNI 4838-80
4. Subsidiary screw	GHISA GJL-250 EN1561
5. Ball bearing	Steel
6. Ball bearing	Steel
7. Screws	Galvanised steel
8. O-ring	NBR
9. Seeger ring	Steel
10. Seeger ring	Steel
11. O-ring	NBR
12. SAE	ASTM A216WCB
connection	
13. SAE flange	ASTM A216WCB

14. O-ring	NBR					
15. Screws	Galvanised steel					
16. Sensor spacer	Aluminium 6082 anodised					
Materials non-medium-	Electronics housing stainless steel 1.4305					
contact	Glass	mineral glass hardened				
	Magnet	samarium-Cobalt				
	Ring	POM				
Supply voltage	1830 V DC					
Power	< 1 W					
consumption						
Analog output	420 mA / max. load 500 Ω or 010 V / min. load 1 kΩ					
Switching outputs	transistor output "push-pull" (resistant to short circuits and polarity reversal) l _{out} = 100 mA max.					

Signal output curves

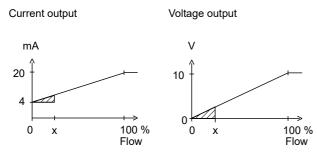

Other characters on request.

Senseca Germany GmbH Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386




Produktinformation

Materials non-medium- Flystefesis	Electronics housing stainless steel 1.4305 adjustable, position of the hysteresis					
riysteresis	depends on minimum or maximum					
Display	backlit graphical LCD-Display (transreflective), extended temperature range -20+70 °C, 32 x 16 pixels, background illumination, displays value and unit, flashing LED signal lamp with simultaneous message on the display.					
Electrical connection	for round plug connector M12x1, 5-pole					
Ingress protection	IP 67 / (IP 68 when oil-filled)					
Weight	see table "Weights"					
Conformity	CE					

Ranges and weights

• = Standard \bigcirc = Option


G	DN		Metering	Volume /	Types	Q _{max}	Weights		
			range 1100 % Q _{nom}	pulse		recommended	Body with aluminium connections	Body with steel connections	SAE Flanges (Weight per pair)
			l/min	cm³		l/min	kg	kg	kg
G 1	DN 25	•	1.4 140	13.10	OMNI-VHS-0250140	200	3.44	4.76	5.76
G 1 ¹ / ₄	DN 32	•	3.5 350	29.00	OMNI-VHS-0320350	500	6.35	8.50	9.55
G 1 ¹ / ₂	DN 40	0	5.5 550	48.58	OMNI-VHS-0400550	800	10.50	13.60	15.10
		•	8.0 800	72.00	OMNI-VHS-0400800	1200	14.20	18.50	18.80
G 2	DN 50	0	10.01000	103.63	OMNI-VHS-0501000	1600	20.70	27.70	30.30
		\bullet	15.01500	133.00	OMNI-VHS-0501500	2200	25.00	33.20	34.60
G 2 ¹ / ₂	DN 65	•	25.02500	238.82	OMNI-VHS-0652500	3800	42.70	56.10	60.70

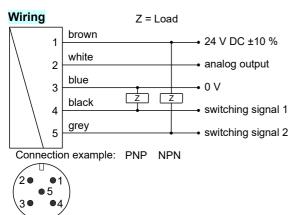



Before the electrical installation, it must be ensured that the supply voltage corresponds to the data sheet.

The use of shielded cabling is recommended. **Dimensions**

• = Sta	andard \mathbf{O} = O	ptio	n					
G	DNranges		x1	L1	ØD	SW	A	М
G 1	0250140 •		20	220	88	78	49.0	12
G 1 ¹ / ₄	0320350	•	22	285	103	-	55.0	14
G 1 ¹ / ₂	0400550	0	24	332	122	-	58.8	16
	0400800	•]	340	138	-	66.5	
G 2	0501000	0	33	396	155	-	71.0	20
	0501500	•	1	405	168	-	77.3	1
G 2 ¹ / ₂	0652500	•	35	475	203	-	86.0	24
	VHSGA	0			v	HSGA	x	

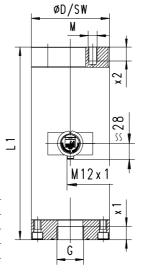

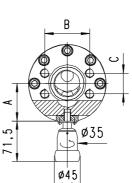

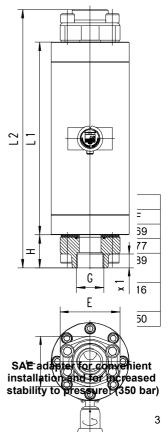



Produktinformation

Handling and operation

Installation

Any flow direction is possible during installation. Ensure that pipework is clean. Flush before installation. A 30 μm mesh filter should be used.

The use of SAE flanges enables the sensor to be installed and removed more easily, and increases the stability to pressure for every connection material at 350 bar. It is possible to replace the electronics during operation, and this presents no danger to the fitter. The sensor does not go into the flow space.

After installation, the electronic head can be turned to align the cable outlet.

Programming

The annular gap of the programming ring can be turned to positions 1 and 2. The following actions are possible:



Set to 1 = continue (STEP) Set to 2 = modify (PROG)

Neutral position between 1 and 2

The ring can be removed to act as a key, or turned through 180 $^\circ$ and replaced to create a programming protector.

Operation is by dialog with the display messages, which makes its use very simple.

Starting from the normal display (present value and unit), if 1 (STEP) is repeatedly selected, then the display shows the following information in this order:

Display of the parameters, using position 1

- Switching value S1 (switching point 1 in the selected unit)
- Switching characteristic of S1
- MIN = Monitoring of minimum value
- MAX = Monitoring of maximum value
- Hysteresis 1 (hysteresis value of S1 in the set unit)
- Switching value S2
- Switching characteristic of S2
- Hysteresis 2
- Code
- After entering the code 111, further parameters can be defined:
- Filter (settling time of the display and output)
- Physical unit (Units)
- Output: 0..20 mA or 4..20 mA
- 0/4 mA (measured value corresponding to 0/4 mA)
- 20 mA (measured value corresponding to 20 mA)

For models with a voltage output, replace 20 mA accordingly with 10 V.


Edit, using position 2

If the currently visible parameter is to be modified:

- Turn the annular gap to position 2, so that a flashing cursor appears which displays the position which can be modified.
- By repeatedly turning to position 2, values are increased; by turning to position 1, the cursor moves to the next digit
- Leave the parameter by turning to position 1 (until the cursor leaves the row); this accepts the modification
- If there is no action within 30 seconds, the device returns to the normal display range without accepting the modification.


The limit switches S1 and S2 can be used to monitor minimal or maximal.

With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is once more exceeded.

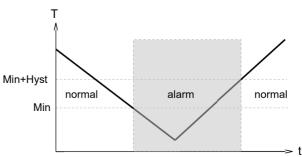

With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

The change to the alarm state is indicated by the integrated red LED and a cleartext in the display.

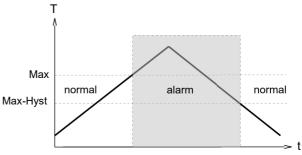

While in the normal state the switching outputs are at the level of the supply voltage; in the alarm state they are at 0 V, so that a wire break would also display as an alarm state at the signal receiver.

Overload display

Overload of a switching output is detected and indicated on the display ("Check S 1/S 2"), and the switching output is switched off.

Simulation mode

To simplify commissioning, the sensor provides a simulation mode for the analog output. It is possible to create a programmable value in the range 0..26.0 mA at the output (without modifying the process variable). This allows the wiring run between the sensor and the downstream electronics to be tested during commissioning. This mode is accessed by means of **Code 311**.

Factory settings

After modifying the configuration parameters, it is possible to reset them to the factory settings at any time using **Code 989**.


Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



OMNI-VHS

Produktinformation

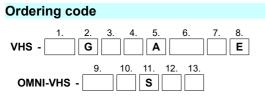

O=Option

1.	Nominal	width					
	025	DN 25 - G 1					
	032	DN 32 - G 1 ¹ / ₄					
	040	DN 40 - G 1 ¹ / ₂					
	050	DN 50 - G 2]		
	065	DN 65 - G 2 ¹ / ₂					
2.	Process	connection					
	G	female thread					
3.	Connecti	on material					
	A	AL connection, anodised (160 bar, in combination with SAE flange: 350 bar)					
		Connection, steel (350 bar)					
4.	Addition						
	X	SAE flange, steel (350 bar)					
	0	no SAE flange (pressure resistance depends on the connection material)					
5.	Body ma	terial					
	A	anodised aluminium					
6.	Metering						
	0140	1.4 140 l/min					٠
	0350	3.5 350 l/min				•	
	0550 O	5.5 550 l/min			•		
	0800	8.0 800 l/min			٠		
	1000 O	10.01000 l/min		•			
	1500	15.01500 l/min		•			
	2500	25.02500 l/min	•				
7.	Seal mat	erial					
	N	NBR					
	V V	FKM					
8.	Connecti	on for					
	E	electronics					
9.	For nomi	nal width	-				
	025	DN 25 - G 1					•
	032	DN 32 - G 1 ¹ / ₄				•	
	040	DN 40 - G 1 ¹ / ₂			•		
	050	DN 50 - G 2		•			
	065	DN 65 - G 2 ¹ / ₂	•				

10.	Anal	og o	utput		
	I		current output 0/420 mA		
	U	0	voltage output 0/210 V		
	K		without	•	
11.	Elect	trica	I connection		
	S		for round plug connector M12x1, 5-pole		
12.	Optio	on 1			
	Н	О	model with gooseneck		
	0	0	tropical model oil-filled version for heavy duty or external use		
13.	Optio	on 2			ĺ
	С	О	Counter C	_	
	C1	0	Counter C1		

Further options available on request.

Options

Counter C (hardware and software option): Preset Counter with external reset option, complementary switching outputs and actual value display (modified wiring diagram!)

Counter C1 (software option): Instantaneous value display with analogue output, pulse-volume output and totalizer

Accessories

- Cable/round plug connector (KB...)
- see additional information "Accessories"
- Device configurator ECI-1

Accessories

- External display / converter OMNI-TA (panel-mounting IP 67)
- External display / converter OMNI-REMOTE (panel-mounting IP 67)