Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation

FLEX-RRI

Flow Transmitter / Switch FLEX-RRI



- Uncomplicated measurement of flow rates
- No magnets; uses inductive sensor
- Long working life thanks to ceramic axis and special plastic bearing
- Run-in and run-out sections are not necessary.
- Modular construction with various connection systems
- Plug-in and rotatable connections
- Analog output and switching output
- Designed for industrial use
- Small, compact construction
- Simple installation
- Simple to use
- Cable outlet infinitely rotatable
- Optionally, non-return valve, filter, constant flow rate device in the connections

Characteristics

The flow meter consists of a spinner which is rotated by the flowing medium. The rotor's rotational speed is proportional to the flow volume per unit time. The rotor is fitted with stainless steel clamps (optionally titanium or Hastelloy®). An inductive proximity switch records the rotational speed, which is proportional to the flow rate.

The FLEX transformer on the sensor has an analog output (4..20 mA or 0..10 V) and one switching output, which can be configured as a limit switch for monitoring minimal or maximal, or as a frequency output.

The switching output is designed as a push-pull driver, and can therefore be used both as a PNP or an NPN output. The state of the switching output is signalled with a yellow LED in the switching outlet; the LED has all-round visibility.

The sensor is configured in the factory, or alternatively this can be done with the aid of the optionally available ECI-1 device configurator (USB interface for PC). A selectable parameter can be modified on the device, with the aid of the magnet clip provided. In this case, the current measured value is saved as the parameter value. Examples of these parameters are the switching value or the metering range end value.

The stainless steel electronics housing is rotatable, so it is possible to orient the cable outlet after installation.

Technical data

Sensor	inductive				
Nominal width	DN 10 (FLEX-RRI-010)				
	DN 25 (FLEX-RRI-025)				
Mechanical	female thread G ³ / ₈ , G 1				
Connection	male thread G ³ / ₈ A, G 1 A				
	hose nozzle Ø11, Ø30 (other threaded, crimped, and plug-in				
	connections, connections with constant flow				
	rate device or limiters available on request)				
Metering ranges	0.1100 l/min				
	for details, see table "Ranges"				
Measurement	±3 % of the measured				
accuracy					
Repeatability	±1 % of full scale value	9			
Pressure loss	max. 0.5 bar				
Pressure	PN 16 bar				
resistance	0.00.00				
Medium	060 °C				
temperature Storage	-20+80 °C				
temperature	2000				
Materials	Housing	PPS			
medium-contact	3	(Fortron 1140L4)			
	Rotor	PVDF			
	Clamps	1.4310			
		optionally:			
		titanium or			
		Hastelloy®			
	Bearing	Iglidur X			
	Axis	ceramic Zr0 ₂ -TZP			
Materials non	Seal	FKM 1.4301			
Materials, non- medium-contact	Clamps				
inediam-contact	Electronic adapter	CW614N nickelled			
	Electronics housing	stainless steel 1.4305			
Supply voltage	1830 V DC				
Power	< 1 W				
consumption					
Analog output	420 mA / max. load 5				
	010 V / min. load 1 kg				
Switching output	transistor output "push				
	(resistant to short circuits and polarity				
	reversal) I _{out} = 100 mA max.				
Display	yellow warning LED in plug outlet				
Electrical	for round plug connector M 12x1, 4-pole				
connection	, 5	, I			
Ingress protection	IP 67				
Weight	FLEX-RRI-010 ap	prox. 0.4 kg			
	FLEX-RRI-025 approx. 0.7 kg				
Conformity	CE				

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation


FLEX-RRI


Signal output curves

Value x = Begin of the specified range = not specified range


Current output

Voltage output

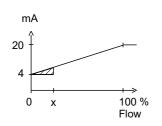

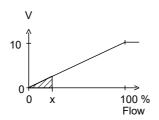

Frequency output

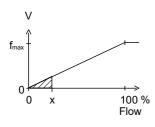

 f_{max} selectable in the range of up to 2000 Hz


Other characters on request.

Ranges

Metering range	Types	Q _{max}		
l/min (H₂O)		l/min (H₂O)		
0.1 1.5	FLEX-RRI-010020	1.8		
0.2 10.0	FLEX-RRI-010050	12.0		
0.4 12.0	FLEX-RRI-010070	14.4		
2.0 30.0	FLEX-RRI-025080	36.0		
3.0 60.0	FLEX-RRI-025120	72.0		
4.0 100.0	FLEX-RRI-025160	120.0		

The measured values were determined with horizontal flow (FLEX electronics upwards) using water at 25 $^{\circ}\text{C}.$

Wiring

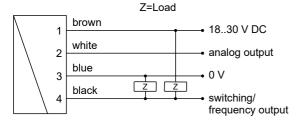

Connection example: PNP NPN




Before the electrical installation, it must be ensured that the supply

voltage corresponds to the data sheet.

The use of shielded cabling is recommended.

Dimensions

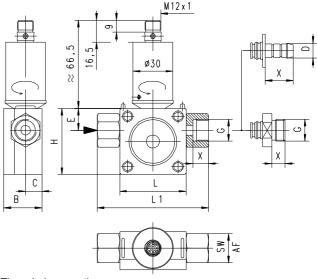

Threaded connection

G	DN	Types	H/L	L1	В	С	E	Х	SW
G 3/8	10	RRI-010G	50	84	29	12.5	16.5	12	22
G 3/8 A		RRI-010A						14	
G 1	25	RRI-025G	70	110	53	23.0	27.5	18	38
G 1 A		RRI-025A		122					

NPT threads on request

Hose nozzle connection

D	DN	Types	H/L	L1	В	С	E	Х
Ø11	10	RRI-010T	50	96	29	12.5	16.5	21
Ø30	25	RRI-025T	70	176	53	23.0	27.5	45

Custom specific connectors on request

Handling and operation

Installation

The Rototron device is installed in the pipework with the aid of the rotatable adapter pieces. If necessary, the adapters can be removed from the body of the housing after the stainless steel clips have been removed from the housing. Before reinstalling, it should be ensured that both the adapter with the O-ring and the sealing surface in the body are clean and undamaged. The adapters should be fitted carefully in the housing (it is best to turn them), so that the O-ring is not damaged.

With this flow sensor, there is no need for run-in and run-out sections. However, it should be ensured that the flow sensor is at all times filled with medium. Any preferred installation position is possible, but the best possible venting position should be chosen (rotor axis horizontal, flow horizontal or from bottom to top).

Air bubbles affect the measurement results. For filling processes, the valve should be installed behind the sensor. A running up time of approx. 0.5 seconds and a running down time of approx. 3 seconds should be noted.

Programming

The electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation

FLEX-RRI

2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).



After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.


In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50% can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".


Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.

The limit switch can be used to monitor minimal or maximal.

With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is again exceeded.

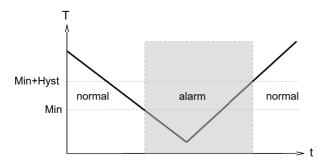


With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

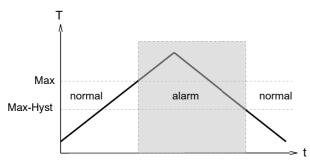


A switchover delay time (t_{DS}) can be applied to the switchover to the

alarm state. Equally, one switch-back delay time (t_{DR}) of several can be applied to switching back to the normal state.

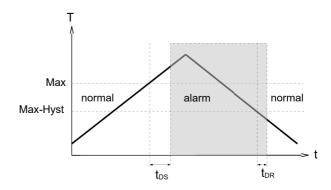

In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply voltage.

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.

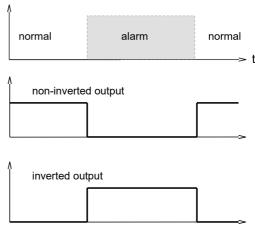

A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Produktinformation FLEX-RRI Ordering code Switching function 13. minimum-switch The basic device is ordered e.g. RRI-010... Н maximum-switch with electronics e.g. FLEX-RRI-010... frequency output K no switching output 14. Switching signal standard 0 O inverted FLEX-RRI-**Options for FLEX** O=Option 1. Nominal width Special range for analog output: I/min 010 <= metering range (standard = metering range) 025 DN 25 2. Mechanical connection Special range for frequency output: l/min female thread G <= metering range (standard = metering male thread Α range) hose nozzle Connection material 3. End frequency (max. 2000 Hz) Hz PVDF Μ O CW614N nickelled Switching delay **O** 1.4305 K (from Normal to Alarm) Housing material Q **PPS** Switchback delay PVDF (from Alarm to Normal) O PPS with transparent cover PSU Α 5. Inwards flow drilling Power-On delay period (0..99 s) • Ø 2.0 020 (time after power on, during which the • 050 Ø 5.0 outputs are not actuated) • 070 Ø 7.0 • 080 Ø 8.0 Switching output fixed I/min • 120 Ø12.0 160 Ø16.0 • Special hysteresis Seal material (standard = 2 % of end value) V FKM O EPDM Е **Options** O NBR Ν Rotor with titanium clamps 7. Rotor 10 with 10 clamps Accessories 02 O with 2 clamps Cable/round plug connector (KB...) 05 O with 5 clamps see additional information "Accessories" 8. Material for clamps Device configurator ECI-1 1.4310 Κ Mechanical connection pieces with non-return valve, filter, O titanium constant flow device or customer-specific requirements Н O hastelloy available on request Connection for Ε electronics 10. For nominal width 010 **DN 10** • DN 25 • 025 11. Analog output current output 4..20 mA voltage output 0..10 V

K

Т

М

Κ

12. Switching output

no analog output

O NPN (open collector)

no switching output

push-pull