

## Product Information

**NMS-004HM77**

# Level Switch NMS-004HM77




- Cover or base mounting for monitoring max. or min. level
- Normally closed or normally open contact

## Characteristics


Mechanical level monitor for fluid media, with contact-free triggering of a reed contact.

## Technical data
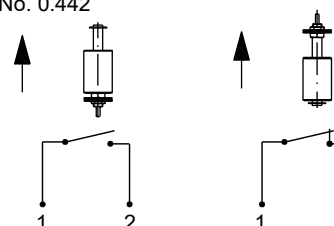
<b>Switch</b>	reed switch
<b>Process connection</b>	male thread G 1/8 A
<b>Density of medium</b>	$\geq 0.35 \text{ g/cm}^3$
<b>Pressure resistance</b>	PN 12 bar
<b>Medium temperature</b>	-20...+105 °C
<b>Ambient temperature</b>	-20...+55 °C
<b>Media</b>	water, oil
<b>Wiring</b>	<p>'normally open' or 'normally closed' No. 0.442</p>  <p>the switching function can be modified by changing the float.</p>
<b>Switching voltage</b>	max. 250 V AC
<b>Switching current</b>	max. 1.3 A
<b>Switching capacity</b>	max. 80 VA

<b>Protection class</b>	2 - safety insulation
<b>Ingress protection</b>	IP 65
<b>Electrical connection</b>	cabl 1.5 m
<b>Materials medium-contact</b>	CW614N nickelled, Spansil (NBR), bronze
<b>Non-medium-contact materials</b>	PVC
<b>Weight</b>	0.075 kg
<b>Installation location</b>	vertical installation position

## Dimensions

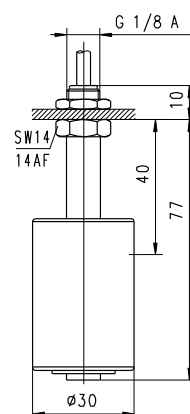

Details of float location 40 mm for density  $1 \text{ g/cm}^3$ .  
The device is delivered without a seal.

## Handling and operation

- It must be ensured that the values given for voltage, current, and power are not exceeded.
- When switched on, a load must be connected in series.
- The electrical details apply to ohmic loads. Capacitive, inductive and lamp loads must be operated using a protective circuit.
- Not suitable for use in media with ferritic particles.

## Ordering code

NMS - 1. 004 2. H 3. M 4. 077

○=Option

<b>1. Connection size</b>	004	threaded connection G 1/8 A
<b>2. Process connection</b>	H	screw-in thread
<b>3. Connection material</b>	M	brass
<b>4. Length</b>	077	77 mm