Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

TZ1-015..050GK

Flow Meter TZ1-...GK



- Large analog display
- Monitor and display
- Simple adjustment by means of drag indicator
- Insensitive to dirt
- Short installation length

Characteristics

The volume flow raises a disc unit (fitted with a magnet) out from a valve seat against a spring force. The magnet actuates the display movement by means of a magnetic coupling.

Technical data

Switch	optionally micro switch				
Nominal width	DN 1550				
Process	female thread G ¹ / ₂ G 2				
connection					
Metering range	2250 l/min for details see				
Q _{max} .	to 250 I/min	table "Ranges"			
Tolerance	±3 % of full scale valu	е			
Pressure	PN 100 bar				
resistance					
Medium	-20+90 °C				
temperature					
Ambient	-20+70 °C				
temperature					
Media	water (oils, gases and aggressive media available on request)				
Wiring	changeover no. 0.342	$ \begin{array}{c cccc} & \overline{7} & \overline{\overline{7}} \\ 3 & 1 & 2 \end{array} $			
Switching voltage	max. 250 V AC				
Switching current	max. 5 A				
Protection class	2 - safety insulation				
Ingress protection	IP 65				
Electrical connection	plug DIN 43650-A / IS	O 4400			
Materials medium-contact	1.4305, 1.4571, 1.4310, NBR, hard ferrite PTFE-coated				
Non-medium- contact materials	CW614N chromed, steel chromed, acrylic, FKM				
Weight	see table "Dimensions	s and weights"			

Standard: horizontal inwards flow; display downwards not recommended; other
installation positions are possible; the installation position affects the switching point and display range.

Ranges


Details in the table correspond to horizontal inwards flow with increasing flow rate.


G	Nominal width	Metering range I/min H ₂ O	Q _{max.} recommended	Туре
G 1/2	DN 15	2 - 6	8	TZ1-015GK006
		4 - 20	20	TZ1-015GK020
G 3/4	DN 20		40	TZ1-020GK020
		5 - 40		TZ1-020GK040
G 1	DN 25	10 - 60	60	TZ1-025GK060
G 1 ¹ / ₄	DN 32	10 - 100	100	TZ1-032GK100
G 1 ¹ / ₂	DN 40	10 - 150	150	TZ1-040GK150
G 2	DN 50	20 - 250	250	TZ1-050GK250

Special ranges are available

Dimensions and weights

G	Types	Н	L	D	X	Weight kg
G ¹ / ₂	TZ1-015GK	210	80	68	15	2.9
G 3/4	TZ1-020GK				16	2.8
G 1	TZ1-025GK				18	2.7
G 1 ¹ / ₄	TZ1-032GK		95	78	24	3.4
G 1 ¹ / ₂	TZ1-040GK	223	105	88	25	3.7
G 2	TZ1-050GK	225	120	102	27	5.1

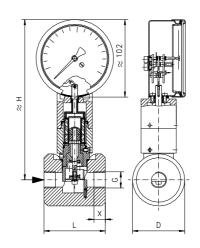



1

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



TZ1-015..050GK

Product Information

Handling and operation

Note

- Include straight calming section of 5 x DN in inlet and outlet
- Include a filter if the media are dirty (use magnetic filter for ferritic components).
- It must be ensured that the values given for voltage, current, and power are not exceeded.
- When switched on, a load must be connected in series.
- The electrical details apply to ohmic loads. Capacitive and inductive loads must be operated using a protective circuit.

Adjustment

The micro switch (optional) is adjusted by means of the knurled adjusting screw provided. The screw allows the drag indicator to be set to the desired switching value. The value displayed corresponds to a switching point for a decreasing flow rate.



Ordering code

	1.	2.	3.	4.	5.
TZ1			G	K	

O=Option

1.	Additional devices									
	-	only analog display								
	M-	with integrated micro switch								
	P- O	with potentiometer	se	e "/	٩dc	litic	ona	ıl		
	M2- O	with 2 x normally open (n.o.)		levi	ce	s fo		-		
	M3- O	with 2 x normally closed (n.c.)			ΓZ1	l"				
2.	Nominal	width								
	015	DN 15 - G ¹ / ₂								
	020	DN 20 - G ³ / ₄								
	025	DN 25 - G 1								
	032	DN 32 - G 1 ¹ / ₄								
	040	DN 40 - G 1 ¹ / ₂								
	050	DN 50 - G 2								
3.	Process	connection								
	G	female thread								
4.	Connection material									
	K	stainless steel								
5.	Metering range H₂O for horizontal inwards flow									
								_		
	006	2 - 6 l/min						•		
	020	4 - 20 l/min					•	_		
	040	5 - 40 l/min				_	•			
	060	10 - 60 l/min				•				
	100	10 - 100 l/min			•					
	150	10 - 150 l/min		•						
	250	20 - 250 I/min	•							

Options

- Gold contact micro switch Goldkontakt
 - min: 5 V DC, 1 mA
 - max: 125 V AC, 30 V DC, 1 A
- Special Harting plug
- Metering ranges for oil or gas
- Special values

Ordering information

- Specify direction of flow, medium, and metering range.
- For oils. State viscosity, temperature and designation (e.g. ISO VG 68) (enquire about metering range).
- For gases, state pressure (relative or absolute), temperature and medium (e.g. air) (request metering range)