Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

VHS

Flow Transmitter / Screw Volumeter VHS



- Measures and monitors viscous media (oil) 1.4..2500 l/min
- Connection G 1..G 2¹/₂
- Very low dependence on viscosity
- Can be used up to 40,000 mm²/s (cSt)
- Linear frequency output (push-pull)
- Light and compact device (aluminium housing)
- Operation and measurement possible with forwards and reverse flow
- For cost-sensitive applications

Characteristics

The VHS flow transmitter measures the flow using the volumetric principle, and is suitable for fluid, viscous, lubricant media (e.g. lubricating oil). If the material for the VHS is selected appropriately, aqueous fluids such as soaps, pastes, and emulsions with nonabrasive characteristics can also be measured, as long as they have sufficient lubricity. Because of the volumetric functioning principle, the device is almost completely independent of viscosity. The VHS system consists of two interlacing screws which run in opposite directions, driven by the flowing medium. A magnetically pre-tensioned Hall sensor positioned outside the flow space detects the screw flanks, and creates a frequency signal proportional to the flow. Here, two pulses correspond to one revolution of the screws, and therefore to a specific measured volume (see data table) There are no magnets in the flow space. A push-pull transistor output, an A / B output or a two wire output are available as signal output. The push-pull output can as desired be switched as a PNP or an NPN output, and emits a frequency proportional to the flow rate.


The A / B output consists of two push-pull outputs, whose signals are phase-shifted by 90 $^{\circ}$. This makes it possible to determine the direction of flow using the bidirectionally driven sensor.

The 2 wire model represents the pulse as two different currents, and has the advantage of reduced wiring effort. Alternatively, it is possible to use add-on electronics with signal processing, in the series OMNI, FLEX and LABO.

The device bodies are made of aluminium, and the connections either of aluminium (achieves PN 160 bar) or steel (achieves PN 350 bar). Optionally, both process connections can be fitted with SAE flanges, which simplify the installation in the pipework, and in both cases achieve a pressure resistance of PN 350.

Technical data

Sensor	screw volumeter						
Nominal width	DN 2565						
Process connection	female thread G 1G 2 ¹ / ₂						
Metering ranges	see table "Ranges"						
Measurement accuracy	±1 % of the measured value (at 20 mm²/s, (cSt) of 1 %100 % nominal working range (see also diagram in upstream pages)						
Repeatability	±0,25 %						
Pressure resistance	Connection material	SAE flange	PN bar				
	aluminium	without	160				
	aluminium	with	350				
	steel	without	350				
	steel	with	350				
	others available on re	quest					
Pressure loss	see diagrams in upstream pages						
Medium	oil or non-aggressive self-lubricating fluids						
Medium temperature	-25+80 °C (150 °C available on request)						
Materials medium- contact	(special materials ava	ailable on					

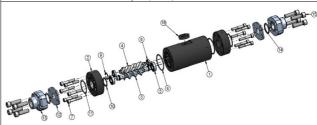

1. Body	1	Aluminium 6082 anodised					
2. Conn	ections:	Aluminium 6082 anodised or steel					
3. Main		Steel 35SMnPb10 UNI 4838-80					
screv	N						
4. Subs	•	GHISA GJL-250 EN1561					
screv	· -						
5. Ball b	•	Steel					
6. Ball b	Ū	Steel					
7. Screv	ws	Galvanised steel					
8. O-rin	g	NBR					
9. Seeg	er ring	Steel					
10. Seeg	er ring	Steel					
11. O-rin	g	NBR					
12. SAE	connection	ASTM A216WCB					
13. SAE	flange	ASTM A216WCB					
14. O-rin	g	NBR					
15. Screv	ws	Galvanised steel					
16. Sens	or	Aluminium 6082 anodised					
space	er						
3 wire or	Supply voltage	1030 V DC					
A/B-	Curr.	anney 20 mA without load					
output	consumpt.	approx. 20 mA without load					
	Signal output	Transistor output "push-pull"					
	Signal output	(resistant to short circuits and					
		reversed polarity protected)					
		I _{out} = 100 mA max.					

Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

VHS

2 wire	Supply voltage	4.524 V DC
	Signal output	Low: 7 mA High: 14 mA
	Reversed polarity protected	yes

Electrical connection	plug DIN 43650-A / ISO 4400 or for round plug connector M12x1, 4-pole
Ingress protection	IP 67
Weight	see table "Ranges and weights"
Conformity	CE

Ranges and weights

● = Standard ○ = Option

G	DN		DN		DN		DN		DN		DN		Metering range 1100 % Q _{nom}	Volume / pulse	pulses / litre	Output frequency at Q _{nom}	Output frequency at Q _{max}	Types	Q _{max} recommended
			l/min	cm³		Hz	Hz		l/min										
G 1	DN 25	•	1.4 140	13.10	76.340	178.1	254.5	VHS-0250140	200										
G 1 ¹ / ₄	DN 32	•	3.5 350	29.00	34.480	201.1	287.4	VHS-0320350	500										
G 1 ¹ / ₂	DN 40	0	5.5 550	48.58	20.590	188.7	274.5	VHS-0400550	800										
		•	8.0 800	72.00	13.890	185.2	277.8	VHS-0400800	1200										
G 2	DN 50	0	10.01000	103.63	9.650	160.6	257.3	VHS-0501000	1600										
		•	15.01500	133.00	7.519	188.0	275.7	VHS-0501500	2200										
G 2 ¹ / ₂	DN 65	•	25.02500	238.82	4.187	174.5	265.2	VHS-0652500	3800										

G	DNrange		Body with aluminium connections	Body with steel connections	SAE Flanges (Weight per pair)
			kg	kg	kg
G 1	0250140	•	3.44	4.76	5.76
G 1 ¹ / ₄	0320350	•	6.35	8.50	9.55
G 1 ¹ / ₂	0400550	0	10.50	13.60	15.10
	0400800	•	14.20	18.50	18.80
G 2	0501000	0	20.70	27.70	30.30
	0501500	•	25.00	33.20	34.60
G 2 ¹ / ₂	0652500	•	42.70	56.10	60.70


Wiring

Before the electrical installation, it must be ensured that the supply voltage corresponds with the data sheet.

The use of shielded cabling is recommended.

Push-pull output


with 4-pole round plug connector

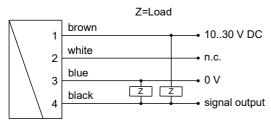

Connection example: PNP NPN




with plug as per DIN 43650-A / ISO 4400 $\,$

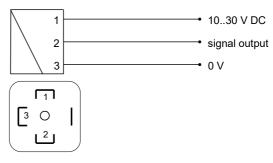

A / B output

only with 4-pole round plug connector

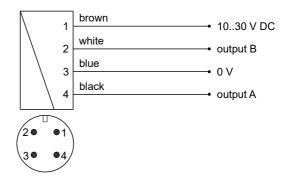

Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386





Product Information

VHS

2 wire model

with 4-pole round plug connector

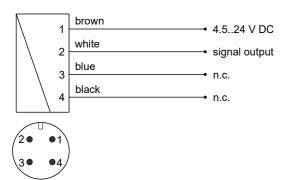


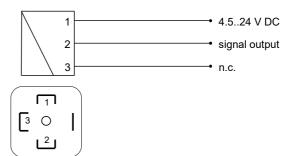

with plug as per DIN 43650-A / ISO 4400

Dimensions

● = Sta	andard O = C)pti	on						VHS	.GAO		VHSGAX			
G	DNrange		x1	L1	ØD	SW	Α	М	x2	В	С	L2	Н	E	F
G 1	0250140	•	20	220	88	78	49.0	12	20	57.1	27.8	324	52	80	69
G 1 ¹ / ₄	0320350	•	22	285	103	-	55.0	14	22	66.7	31.6	381	48	94	77
G 1 ¹ / ₂	0400550	O	24	332	122	-	58.8	16	24	79.4	36.5	448	58	106	89
	0400800	•		340	138	-	66.5					456			
G 2	0501000	O	33	396	155	-	71.0	20	35	96.8	44.4	544	74	135	116
	0501500	•		405	168	-	77.3					553			
G 2 ¹ / ₂	0652500	•	35	475	203	-	86.0	24	42	123.8	58.7	633	79	166	150

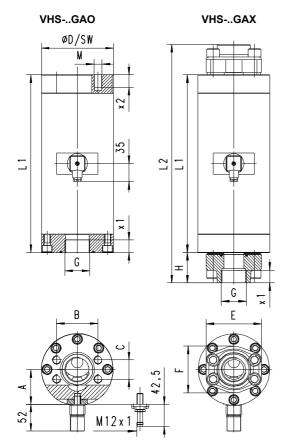

SAE adapter for convenient installation and for increased stability to pressure! (350 bar)

Handling and operation

Installation

Any flow direction is possible during installation.

Ensure that pipework is clean. Flush before installation. A filter with 30 μm mesh filter should be used. The use of SAE flanges enables the sensor to be installed and

The use of SAE flanges enables the sensor to be installed and removed more easily, and increases the stability to pressure to 350 bar for every connection material.

It is possible to replace the electronics during operation, and this presents no danger to the fitter. The sensor does not go into the flow space.

Ordering code

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386



Product Information

,,,,,

	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	
VHS -		G			Α		N				

O=Option

1.	Nominal	width								
	025	DN 25 - G 1								
	032	DN 32 - G 1 ¹ / ₄								
	040	DN 40 - G 1 ¹ / ₂								
	050	DN 50 - G 2								
	065	DN 65 - G 2 ¹ / ₂								
2.	Process	connection								
	G	female thread								
3.	Connecti	on material								
		AL connection, anodised								
	Α	(160 bar, in combination with								
		SAE flange: 350 bar)								
		Connection, steel (350 bar)								
4.	Addition									
	X	SAE flange, steel (350 bar)								
	_	no SAE flange (pressure resistance								
	0	depends on the connection								
_	material) Body material									
5.	А	anodised aluminium								
6.	Metering									
Ю.	0140	1.4 140 l/min								
	0350	3.5 350 l/min								
	0550									
	0800	8.0 800 I/min								
		10.01000 I/min								
	1500	15.01500 l/min								
	2500	25.02500 I/min								
7.	Seal mate									
<u> </u>	N	NBR								
		FKM								
8.	Signal output									
	М	push-pull transistor output								
	C A	A / B output (2 x push-pull)								
		2 wire								
9.	Electrica	I connection								
	В	plug DIN 43650-A / ISO 4400								
	S O	for round plug connector M12x1, 4-pole								
10.	Option									
	н о	high temperature model only for M12x1								
	II	Plug, electronics recessed by 30 cm								

Accessories

 Cable/round plug connector (KB...) see additional information "Accessories"

Accessories

- External counter EEZ-904
- External counter OMNI-C (panel-mounting IP 67)
- External display / converter OMNI-TA (panel-mounting IP 67)
- External display / converter OMNI-REMOTE (panel-mounting IP 67)