

Produktinformation

AC Voltage Transmitter VT500



- 6 measuring ranges selectable 0..600 V AC
- Average function selectable
- Frequency range 40..2000 Hz

Characteristics

Voltage transmitter VT500 converts true r.m.s. voltage measuring values of all types of waveforms into industry standard signals for process control systems. For example, the load voltage of an frequency converter can be detected and converted.

Technical data

Power supply

Supply voltage : 85..265 V AC or 10..30 V AC/DC

Frequency : 40..400 Hz

Power consumption : <3 VA

Operating

temperature : -10..+60 °C

CE-conformity : EN 61326-1:2013; EN 60664-1:2007

Input

Voltage AC : 0..100 / 200 / 300 / 400 / 500 / 600 V AC, overload max. 1200 V max. 5 s

R_i : 720 kΩ

Frequency : 40..2000 Hz fundamental wave, 162/3 Hz on request

Start value : adjustable ± 5 %

End value : adjustable ± 35 %

Output

Current : 0/4..20 mA, selectable, burden ≤ 1 kΩ

Voltage : 0/2..10 V DC, selectable, load max. 15 mA, short-circuit-proof (parallel with the voltage output max. 5 mA)

Rise time (T₉₀) : ≤ 150 ms

Accuracy : ≤ 0.5 %; single adjustment ≤ 0.2 %

Case

: Polycarbonate, UL94V-0


TS 35 acc. to DIN EN 60715:2001-09

Weight : approx. 200 g

Connection : screw terminals, max. 2.5 mm²


Protection class : case IP30, terminals IP20 acc. to BGV A3

Dimensions

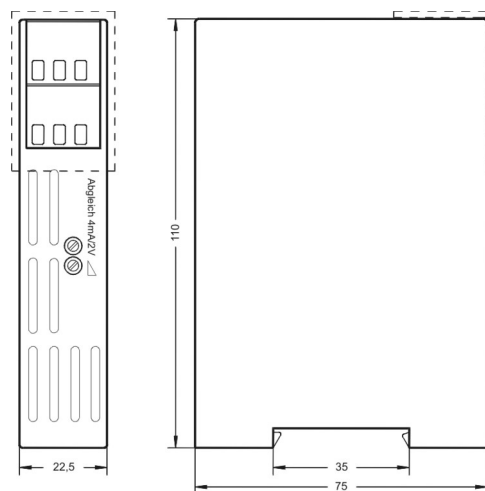

DIN rail mounting TS35

Connection diagram

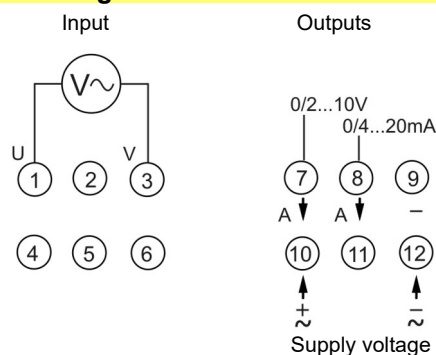

Ordering code

VT500 - 1. - 2.

1. Measuring ranges	
30	0..100 / 200 / 300 / 400 / 500 / 600 V AC
	custom range on request
2. Supply voltage	
0	85..265 V AC
5	10..30 V DC
Accessories	
KA-VT	terminal cover for measuring voltages > 400 V AC