Senseca Germany GmbH

Tenter Weg 2-8 | 42897 Remscheid | GERMANY Phone +49 2191 9672-0 | Fax +49 2191 9672-40 www.senseca.com | info@senseca.com | WEEE Reg. No. DE 93889386




Product Information

VKI-032K

Weld-on nozzle VKI-032K





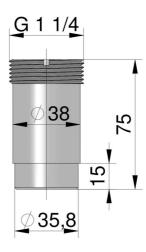

Features

A weld-on nozzle is available for installation of impeller probes of the series RR.-032 in steel or stainless steel pipelines. A bore hole in the pipeline with 36.5 mm diameter in which the weld-on nozzle is welded is required.

Installation of the impeller probe in the nozzle takes place with the clamping ring with union nut supplied with the probe. The installation point should be chosen such that an uninterrupted

The installation point should be chosen such that an uninterrupted (no valves, bends, edges, etc.) inlet and outlet section having a length of at least 10 times the inner diameter of the pipe is provided upstream and downstream from the probe.

Technical data

Pipeline diameter	min. DN 40
Wetted materials	1.4305
Compressive strength	PN10

Ordering code

VKI-032K	Weld-on nozzle for RRI/RRH-032